


# Decal Instructions

## Albatros D.V/D.Va Fuselage Decal

**PDW-6012, 7012**

Apply decals to a fuselage that is assembled, filled, sanded, and painted with a coat of gloss white. Trim each decal and allow to soak for 5 minutes in warm water before you attempt to remove the decal from the backing paper.

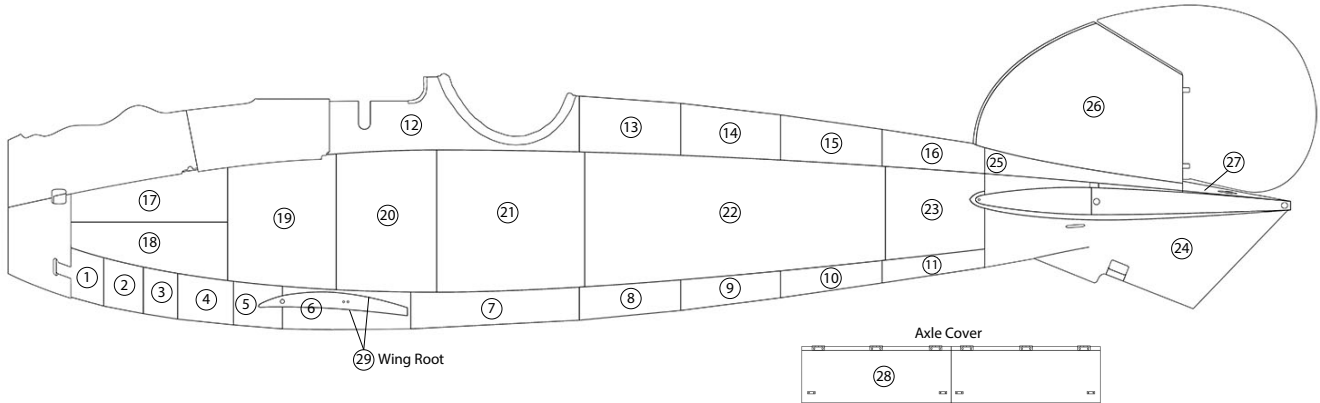

2. Apply the fuselage decals in the numbered sequence shown on the sheet. We recommend that you start from the bottom panels, then top ones, leaving the side panels for last.



3. Please note the decals may stretch. We added extra 0.75 mm from each side of panel to avoid any gap. Use a fresh razor or sharp hobby knife to trim the decals after they dry.

4. Apply a decal setting solution and allow to dry overnight.

5. After the woodgrain decals dry, you can apply kit decals and other parts (louvers and inspection hatches).

